

Wave SPEEDER

RADIO-CONTROLLED MOTOR BOAT


2.4G
System

STOP
Full Function

1:47
Scale

130 Dual Motors


14
Ages

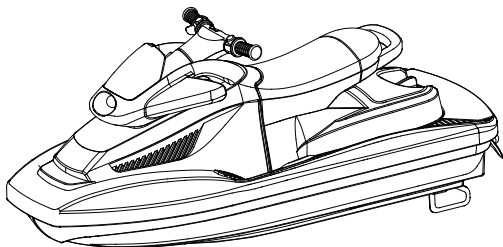


1. The boat will automatically power on when placed on water, and connect to the remote control.
2. Do not pilot the boat more than 160 ft (50 m) away from the remote control, otherwise connection will be lost.
3. The boat can be operated for approximately 20 minutes when fully charged. Make sure to bring it back within range 5 minutes before, when the controller's light flashing, it means the boat will be in the lower battery, you should return back the boat under the control range, otherwise it may run out of battery somewhere you cannot reach.
4. The boat does not have a self-righting function, so take care not to flip it or crash into obstacles during operation.
5. Avoid aquatic plants during operation, as these may get entangled with the propeller.
6. The rudder direction must be adjusted manually.

For more information, visit force1rc.com or email us at support@force1rc.com

RC Boat Overview

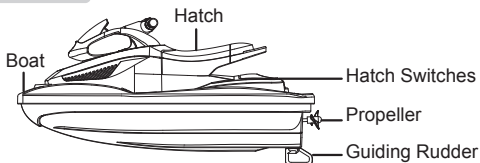


Remote Control Overview

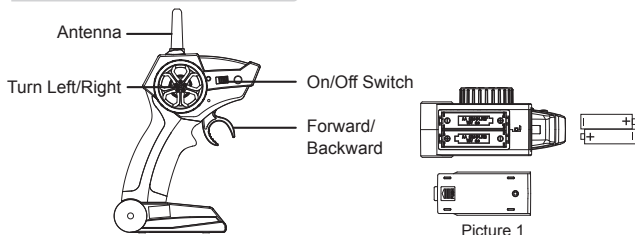

Battery Installation

Open the battery cover on the back side of the remote controller and put 2 AA alkaline batteries (not included) into the box in accordance with electrode instructions, as shown in Picture 1.

Charging Instructions for Boat Battery

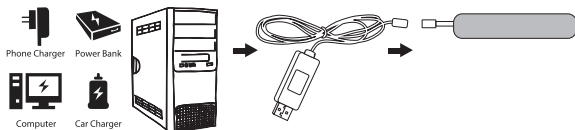


1. Plug the boat battery into the included USB charging cable.
2. Choose one of the methods as pictured above to connect with the USB plug.

Charge time is approximately 90 minutes. The red charging light indicator will go off while the battery is charging and turn back on when charging is complete.

CAUTION

1. Install batteries following the correct polarity.
2. Do not mix old and new batteries.
3. Do not mix different types of batteries.
4. Non-rechargeable batteries should not be charged.
5. Remove rechargeable batteries from the toy before charging.
6. Rechargeable batteries should be charged under adult supervision.
7. Charge the battery in a safe area away from moisture and flammable materials.
8. When charging, use only the included USB charging cable.
9. Exhausted batteries are to be removed from the toy.

 Boat Battery Installation




1. Put the boat battery into the battery holder. Make sure that the battery is placed correctly.




2. Insert the cabin cover at a diagonal angle to the boat body by pushing it forward into the hull. Lock the cabin switch.

Basic Operation Controls

 
Forward




Backward

 

Turn right

 

Turn left


 


Rudder: When the boat is moving to the left, manually adjust the rudder to the right. When the boat is moving to the right, manually adjust the rudder to the left.



Maintenance

  1. After operation, please remove the battery.
2. The surface of the boat should avoid water exposure for long periods of time outside of operational use. After operation, dry the outside of the boat with a clean cloth.
3. When not in use for long periods of time, remove the battery of the remote controller to avoid battery leakage.



4. It's important to keep the inside of the boat dry. After operation, dry the inside of the boat with a clean cloth. Using desiccant will help keep the boat dry when not in use.

Safety Precautions

1. This product is suitable for people ages 14 and above. Anyone younger than 18 must be supervised by an adult when operating.
2. After operating the boat, **DO NOT RECHARGE BATTERY** until it has cooled down.
3. When operating the boat, observe the area. Do not operate near people or debris in the water, as it could damage the boat and/or cause injuries.
4. This product contains small parts that are choking hazards. Keep out of reach of children.
5. Please keep a safe distance when operating the boat. The high speed propeller can cause injuries.
6. After operation, do not touch the motor as it heats up and can burn your skin.
7. This model is controlled by a radio signal subject to interference from many sources that can cause momentary loss of control. Do not operate near airports within a 5,000-meter radius.
8. Consult local laws and ordinances before choosing a location to pilot your boat.
9. Regularly check the USB cable and other parts for damage. Please replace any broken parts before operating.

For more information, visit force1rc.com or email us at support@force1rc.com



To ensure that play is both safe and fun, please review these operating instructions:

Failure to follow all safety instructions may result in injury or property damage none of which Force1 will be held liable for as proper warnings are outlined in the manual.

- Upon use of this product the end user assumes all responsibility and Force1 cannot be held liable for any personal injury and/or property damage.
- This item contains fast moving parts, motors and/or other wiring. When using it, basic precautions should always be followed including but not limited to the following:
 - Keep your eye on the product at all times
 - Tie back hair or wear a hat to avoid entanglement or injury
 - Keep hands, hair and loose clothing away from moving parts when the power switch is turned ON.
 - Please ensure the product is turned off when not in use.

WARNING 	CHANGES OR MODIFICATIONS TO THIS UNIT NOT EXPRESSLY APPROVED BY THE SELLER WILL VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.
--	---