

# GALAXY LIGHT SWORD

AGES 6+



1. Assemble the small side pieces.



2. Use the screwdriver to open the battery cover.



3. Put 3AAA batteries in the battery compartment using the correct polarity. (batteries not included)



4. Press the power button to turn on the sword.

5. Add the connector to turn individual swords to one swordstaff!



### **Play Modes: Quick press the power button to move from one mode to the next.**

1. The sword will change colors when moved with a quick motion.
2. The sword rapidly flashes through different colors.
3. The sword changes colors slowly fading from one color to the next.
4. Long press the power button to lock in the solid color of your choice.

### **Battery Instructions:**

1. Do not mix different types of batteries or old and new batteries.
2. Be sure to insert batteries with correct polarity.
3. Remove dead batteries from toy.
4. Each sword requires 3 AAA batteries.
5. Batteries are not included.
6. To open battery cover use the included screwdriver.
7. Packaging contains important information, do not discard.



**WARNING:**

This product should be assembled by adults. Contains small parts that could be a choking hazard. Not meant for children under 3 years of age.



MADE IN CHINA



Please include your order number when you contact us at [support@usatoyz.com](mailto:support@usatoyz.com) for fast, friendly service.