

TROUBLESHOOTING

PROBLEM	SOLUTION
Vehicle will not start	1. Make sure the climber is fully charged and transmitter has new AAA batteries installed in the correct polarity 2. Make sure the climber switch on the back of the car is turned to either Wall or Floor
Vehicle does not climb	1. Make sure the climber is fully charged and transmitter has new AAA batteries installed in the correct polarity 2. Make sure the climber switch on the back of the car is switched to "Wall" 3. Make sure the driving surface is smooth
Vehicle does not drive straight	1. Make sure the surface is clean of dirt/dust 2. Make sure the surface is smooth 3. Adjust the trim using the buttons on the transmitter. See instructions in the manual
Vehicle slips climbing the walls	1. Make sure the climber is fully charged 2. Fold up the fabric skirts for a better seal prior to use 3. Make sure the surface is smooth
Vehicle falls off the wall	1. Make sure to drain the battery, then charge it again for 1 hour 2. Clean tires and make sure your wall and floor are also clean 3. Check the fabric skirts for damage. If they have been pulled loose, tape them back with flexible tape 4. Make sure surface is flat 5. Suction is jammed, clear the suction fan on the bottom of the car of any debris

ALWAYS USE UNDER ADULT SUPERVISION

NOTE: USE ON SMOOTH, CLEAN SURFACES ONLY!



LEARN MORE ABOUT FORCE1
www.force1rc.com



For fast, friendly service contact us at
support@force1rc.com

FORCE1 ZERO G CLIMBER

INSTRUCTION MANUAL




BOX CONTENTS

- Zero G Climber
- Transmitter
- USB Charging Cable
- Manual
- Screwdriver


DRIVING ON THE GROUND

Switch the climber to FLOOR mode.

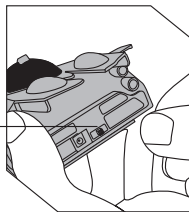


Turn the controller "ON"

OFF ON

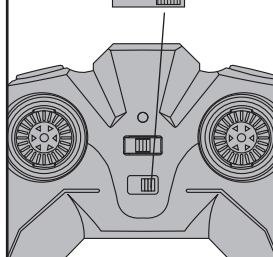


DRIVING ON THE WALLS, WINDOWS OR CEILING!


Switch the climber to WALL mode.

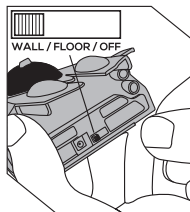


The fabric strips can be adjusted upward at a 45° angle to ensure the car sticks properly to the wall.

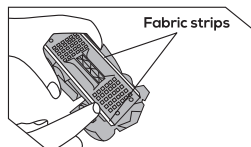

Place the vehicle on the wall as shown.

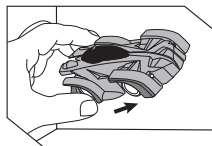

CONTROLLER

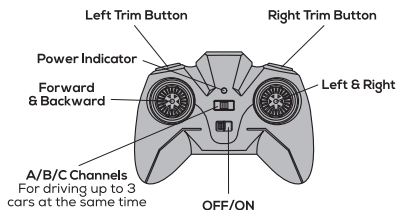


If the car is not driving straight, try adjusting the trim either left or right by pushing and holding the trim button. If the car drifts to the right, use the left trim button. If the car drifts to the left, use the right trim button.




BATTERY INSTALLATION



1. Loosen the screw and remove the battery compartment door.
2. Install 3 x AAA batteries (not included) in the battery compartment as shown. Make sure to follow the correct positive and negative polarities with the corresponding markings inside the battery compartment.
3. Re-install the battery compartment door and tighten the screw.

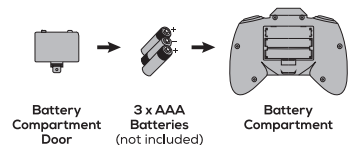






Push the left joystick up or down to make the climber go forward or reverse.

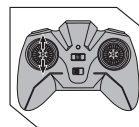

Push the right joystick to the left or right to start 360 spins!

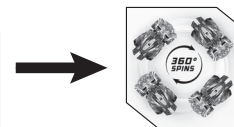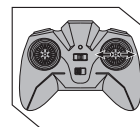


LED LIGHTS

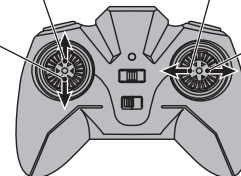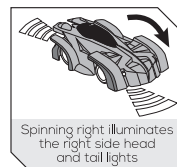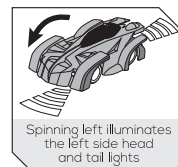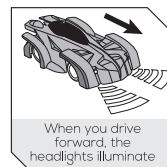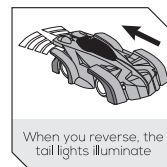


CHARGING INSTRUCTIONS

1. Make sure the vehicles WALL / FLOOR / OFF switch is in the OFF position.
The car can only be charged when the vehicle is on the OFF position.
2. Plug the charging cable into the port in the back of the vehicle.

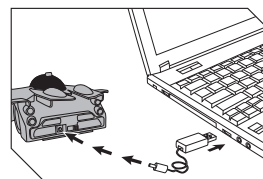

While charging, a red light will illuminate on the USB charger. When charging is complete, the red light will turn off.

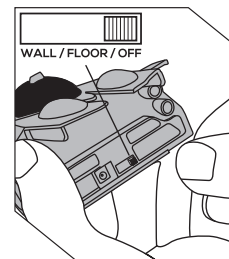

- Charge time - Approximately 60 minutes
Play time - Approximately 11 minutes in wall mode
Approximately 20 minutes in floor mode

WARNING: Do not charge the battery immediately after use. Let the battery cool down for at least 10 minutes.