

- Once new and charged batteries have been installed in the transmitter and car, turn the car and transmitter on for automatic pairing!
- If the car turns off while playing, first check the on/off switch at the bottom of the car and make sure it didn't get switched to the "off" position while playing. Check to make sure the battery is fully charged and the transmitter has new batteries
- If the wheel at the top becomes loose, please replace the wheel and metal pole with the ones provided in the box

COLLECT THEM ALL BEFORE THEY GO EXTINCT!



T-REX



RAPTOR




TRICERATOPS

FUN DINO JOKES!

- Why was the Stegosaurus such a good volleyball player?**
Because it could really spike the ball!
- What do you get if you cross a dinosaur with a pig?**
Jurassic Pork!
- How do you invite a dinosaur to a cafe?**
Tea, Rex?
- What do you call a dinosaur that never gives up?**
Try-try-try-ceratops!
- What is the best way to talk to a velociraptor?**
Long-distance!
- What do you call a paleontologist who sleeps all the time?**
Lazy bones!
- What kind of materials do dinosaurs use for the floor of their homes?**
Rep Tiles!
- What is a dinosaur's least favorite reindeer?**
Comet!
- What do you call it when a dinosaur gets a touchdown?**
A dino-score!
- What do you call a sleeping dinosaur?**
Dino-snore!

 FORCE1

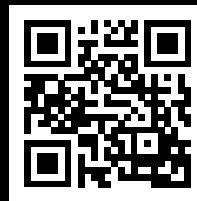

LEARN MORE ABOUT FORCE1
www.force1rc.com

FOR MORE INFORMATION

Visit us online at www.force1rc.com for product information and replacement parts.

Questions or comments? Please contact us at support@powerurfun.com for fast friendly service.

FORCE1
WHIRLER
360°



**INSTRUCTION
MANUAL**

BOX CONTENTS

- 👉 DINO CAR
- 👉 SCREWDRIVER
- 👉 CONTROLLER
- 👉 LI-ON BATTERY 500mAh
- 👉 USB CHARGER
- 👉 SPARE WHEEL AND METAL POLE

SAFETY PRECAUTIONS

To ensure that your child's play is both safe and fun, please review these operating instructions with your children.

- 👉 Do not pick up moving dino car
- 👉 Keep hands, hair and loose clothing away from the wheels when the power switch is turned on
- 👉 Please ensure dino car is turned off when not in use

BATTERY CARE:

- 👉 Non-rechargeable batteries are not to be rechargeable
- 👉 Rechargeable battery is only to be charged by an adult
- 👉 Different types of batteries of new and used batteries are not to be mixed

- 👉 Batteries are to be inserted with correct polarity
- 👉 Do not short circuit the supply terminals
- 👉 Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries

To help protect the environment, batteries should not be put in household waste. Please check with your local recycling or trash facility on how and where you can properly dispose of batteries and other electrical components.

CARE AND MAINTENANCE:

- 👉 To clean, wipe the toy gently with a clean damp cloth
- 👉 Keep away from water

NOTE:

- 👉 Users should keep and retain this information for future reference
- 👉 Please follow all instructions and safety precautions while using the Dino Whirler under adult supervision

BATTERY REQUIREMENT FOR REMOTE TRANSMITTER:


Rating - DC3V
Battery Type - 2 x 1.5V AA Batteries (not included)

BATTERY INFORMATION FOR DINO CAR:

Rating - DC3.7V
Battery - 1 x 3.7V Li-Ion Rechargeable Battery (included)
Capacity - 500 mAh
Charge Time - Approximately 90-120 minutes
Play Time - Approximately 30-40 minutes


DINO WHIRLER BATTERY

- 👉 The battery compartment is at the bottom of the car
- 👉 To access the battery compartment, use the provided screwdriver
- 👉 Plug the rechargeable battery into the plug located in the battery compartment. Press the small black tab at the top of the battery plug, and pull the battery, to release the battery from the plug
- 👉 Replace the battery cover on the bottom

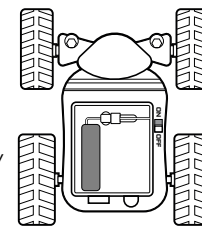

TRANSMITTER BATTERIES

 - 👉 Unscrew the battery cover on the back of the transmitter
- 👉 Install 2 AA batteries (not included), according to the indicated polarity
- 👉 Replace the battery cover on the back of the transmitter

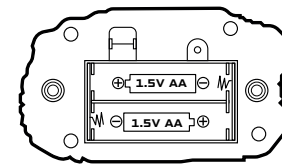

Use 2 x AA batteries
(Not included)

USING YOUR DINO STUNT CAR

