



SAFE INSTRUCTIONS

The **All-American Piggy Bank ATM** can be used to store toys, jewelry, baseball cards, and of course, money! Simply place your coins through the coin slot or insert bills through the bill feeder on the front of your bank.

1. BATTERY INSTALLATION

Before use, unscrew the battery compartment on the bottom of the safe. Install **3 AA batteries** following the proper polarity (+ and -). Always use the same type of battery, don't mix old and new batteries and remove old batteries.

2. OPENING THE SAFE

The preset safe password is "0000". After you enter the 4 digit password, the green light will illuminate. Turn the safe knob clockwise to open the safe. When you are finished removing or adding items, close the door of the safe.

3. CHANGING THE PASSWORD

To change the password, do the following:

- Input password (default: 0000) and open the safe door.
- While the door is open, press the "*" button, the green and red lights will flash.
- Within 15 seconds, enter the new 4 digit password, press "#" key to save your new password, the lights will stop flashing.
- Close the door, once the keypad is not illuminated, you can enter your new password and open your safe!

SAFE INSTRUCTIONS

- If you forget your password, simply remove the batteries from the bottom of the ATM and replace them. Then proceed with the default password of 0000 and follow the instructions above to set a new password.

4. VOICE PROMPTS

- When you press buttons, you may hear either a beep or "password please."
- If you input the wrong password, a red light will flash in the transparent window and you will hear "Uh oh" or "Uh oh, I'm sorry, please try again". Wait until the red light is off and try your password again.
- If the door remains open for more than 10 seconds, a red light will flash and the safe will beep prompting you to close the door for safe keeping!

5. PUTTING MONEY IN YOUR SAFE

Add coins to your bank from the top of the coin slot. Add bills by inserting them into the bill slot in the front of the bank. Wait for the green light to stop flashing before adding another bill. If money is stuck, a red light will illuminate, input your password to open the safe door to pull your money gently out.



USA Toyz

CONTACT US: support@usatoyz.com